

# Work Order ID 75384

**\*75384\***

Page 1

October-21-11 11:28:56 AM

Item ID: D206-642-151

Accept

**\*N900040100\***

Setup Start **\*NS1\***

Revision ID:

Item Name: Replacement Skidtube

Stop **\*NS2\***

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals:

Process Plan: M.L.J

Date: 11/10/21

Tooling:

Date:

QC:

Date:

SPC (Y/N):

Date:

Run Start **\*NR1\***

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

D3804

A

IIN-D206-642

O

100

0.00

**\*100\***

DOCUMENT CONTROL

DC

Memo

0.00

Document Control

Photocopy bluefile & type labels per PPP D206-642-151

CHG001

*N/A*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75384

**\*75384\***

Page 2

October-21-11 11:28:56 AM

Item ID: D206-642-151

Accept

**\*N900040100\***

Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

110

0.00

**\*110\***

Skidtubes

0.00

Skidtubes

Skidtubes

## Memo

1-Deburr Fwd edge of tube

2- Remove ridge on inside of Fwd edge of tube as per Dwg D3804

3-Weld Fwd Cap as per Dwg D3804. Use aluminum rod. Grind D2647 to fit as required.

Pick:

Qty Part Number Description Batch

A/R Aluminum Rod *M118735 / M117889*

4-Grind weld flush to cap on top surface only.

5-Cut Aft end as per dwg D3804 from front of tube and Deburr

6-Remove inner indexing ridge on Aft end of skidtube as per Dwg D3804

7-Open holes for Aft end cap as per Dwg D3804 with #30 Drill Bit using DT8025.

8-Drill pilot holes using Dt8166 & DT8169D & DT9771.

9-Locate DT8732 from inner Aft saddle hole & 3rd crossbolt hole. Insert D3286-1 doubler using DT8732 & D206-642-241-T1, then locating doubler off of 3/16" holes, cleco DT8732 & doubler leaving DT8732 for added support.

10- Drill D3286-1 doubler rivet holes in tube using # 30 drill, spot drilling doubler at the same time.

*DC 11/11/23*

*BE11-11-24*

*DC 11/11/24*

*DC 11/11/24*

*DC 11/11/25*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

Work Order ID 75384

\*75384\*

Page 3

October-21-11 11:28:56 AM

Item ID: D206-642-151

Accept

\*N900040100\*

Setup Start \*NS1\*

Revision ID:

Item Name: Replacement Skidtube

Stop \*NS2\*

Start Date: 21/10/2011 Start Qty: 1.00

\*1\*

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

\*1\*

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Run Start \*NR1\*

Stop \*NR2\*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

11-Working from the center out, drill # 30 holes into D3286-1 doubler. Cleco each hole as it is being drilled. Verify angle of holes to accommodate rivet heads.

12-Remove 3/16" cleco's only and open GHW holes to Ø0.500" as per Dwg D3804

13-Remove D3286-1 doublers, identify orientation, deburr, then attach them to the workorder

14-Remove indexing edge using DT8741 as per Dwg D3804

15-C'sink GHW rivet holes as per Dwg D3804

16- Open Aft cap hole #6.  
\*\*\*\*no wearplate holes for this skidtube\*\*\*\*

17-Deburr tube and blow out chips from inside the tube

120

QC6- Inspect dimensions to drawing

0.00

\*120\*

QC

Memo

0.00

Quality Control

*Signature* 11/11/25

*Signature* 11/11/25

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75384

**\*75384\***

Page 4

October-21-11 11:28:56 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
140	Chemical Conversion Coat per QSI005 4.1	0.00							
<b>*140*</b>									
HandFinish	Memo	0.00							
Hand Finishing									
150	QC3- Inspect Part Finish	0.00							
<b>*150*</b>									
QC	Memo	0.00							
Quality Control									
160	Skidtubes	0.00							
<b>*160*</b>									
Skidtubes	Memo	0.00							
Skidtubes	1-Open holes to finished size as per Dwg D3804, (without cutting fluid)								
	2-C'sink crossbolt spacer holes as per Dwg D3804(without cutting fluid)								
	3-Deburr and blow out all chips from inside the tube								

*(Handwritten signatures and dates)*  
 11-11-28  
 11/11/28

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



# Work Order ID 75384

**\*75384\***

Page 5

October-21-11 11:28:56 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:

## Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
170 <b>*170*</b> QC Quality Control	QC6- Inspect dimensions to drawing  Memo	0.00  0.00							
180 <b>*180*</b> Skidtubes Skidtubes	Skidtubes  Memo 1-Locate, install and rivet doublers as per Dwg D3804. Micro-shave rivets as required  2-Bond D2654-1 web in place as per QSI 015. Ensure holes line up.Allow 12 Hrs. cure time before cutting Start Date: <u>11/11/20</u> Time: <u>10:00 am</u> Finish Date: <u>11/11/29</u> Time: <u>11:00</u>  Pick: Qty Part NumberDescriptionBatch A/RSikaflex-291 <u>119399</u> Sikaflex expire date: <u>12/08/13</u>	0.00  0.00							<u>11-11-28</u>  <u>11/11/20</u>

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

October-21-11 11:28:56 AM

**\*75384\***

Page 6

**Accept**

**\*N900040100\***

Setup Start \*NS1\*

Stop \*NS2\*

**Item Name:** Replacement Skidtube

**\* 1 \***

**Cust Item ID:**

**\*1\***

**Customer:**

**Reference:**

**Approvals:**      **Process Plan:** \_\_\_\_\_ **Date:** \_\_\_\_\_ **Tooling:** \_\_\_\_\_ **Date:** \_\_\_\_\_

Run Start \*NR1\*

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop \*NR2\*

### Operation Description

### Set Up/ Run Hours

## Tool ID

**Tool #****Plan  
Code**

**Accept  
Qty**

Reject  
QtyReject  
Number

**Insp.  
Stamp**

190

QC5- Inspect part completeness to step on W/O

0.00

**\*190\***

QC

## Memo

0.00

## Quality Control

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75384

**\*75384\***

Page 7

October-21-11 11:28:56 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

200

0.00

**\*200\***

Skidtubes

Skidtubes

## Memo

0.00

1-remove alodine from around hole and prepare for welding ✓ *DL 11/11/29*

2-Prep per QSI 005 and Insert D2649 crossbolt spacers. Weld as per QSI 004 and Dwg D3804. Remember to back drill each hole to 0.25" before welding the other side. Use aluminum rod.

Pick:

QtyPart NumberDescriptionBatch  
 A/RAluminum Rod *M117889*

*BE11-11-29*

3-Grind welds flush as per Dwg D3804. *BB 11/11/29*

4-Using DT8733, insert (2) D3286-3 spacers as per QSI 004 and Dwg D3804. Remember to back drill each hole to Ø0.402" before welding other side. Use SS rod as required.

A/RSS Rod *NCNE BE11-11-29*

5-Counterbore 5/16" x 0.750" deep except 7th hole from Aft end as per Dwg D3804. Deburr

*DP*

*11-11-30*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75384



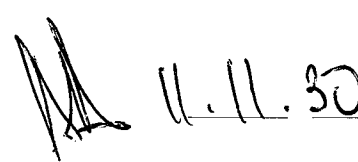

**\*75384\***

Page 8

October-21-11 11:28:56 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
210		0.00							
<b>*210*</b>	HandFinishing								
HandFinish	Memo	0.00							
Hand Finishing	Install D2680-041 Nut Plate as per Dwg D3804								
215		0.00							
<b>*215*</b>	QC9- Inspect visual per QSI004- Fusion Welds								
QC	Memo	0.00							
Quality Control									
									
220		0.00							
<b>*220*</b>	QC10- Inspect visual per QSI004- ground welds								
QC	Memo	0.00							
Quality Control									
									

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



# Work Order ID 75384

**\*75384\***

Page 9

October-21-11 11:28:56 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
230	QC5- Inspect part completeness to step on W/O	0.00							
<b>*230*</b>									
QC	Memo	0.00							
Quality Control									
240	Pressure Wash per QSI005 4.3	0.00							
<b>*240*</b>									
HandFinish	Memo	0.00							
Hand Finishing									
250	White Gloss(Ref:4.3.5.1) per QSI005 4.3-Alum	0.00							
<b>*250*</b>									
Powdercoat	Memo	0.00							
Powder Coating									

START TIME: 9:20  
 OVEN TEMPERATURE: 320°F  
 FINISH TIME: 9:40

M118434

11 12 01 ①

IX Ø m-11/12/01

IX Ø m-14/12/05

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 75384****\*75384\***

Page 10

October-21-11 11:28:56 AM

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
260	QC3- Inspect Part Finish	0.00							
<b>*260*</b>						16H	4	11/12/12	
QC	Memo	0.00							
Quality Control									
270	HandFinishing	0.00							
<b>*270*</b>						16H	4	11/12/13	
HandFinish	Memo	0.00							
Hand Finishing	1-Install D2651-3 O-Rings on D2651-1 plugs with Petroleum Jelly and install plugs as per Dwg D3804. Clean excess adhesive.								

LH

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75384

**\*75384\***

Page 11

October-21-11 11:28:56 AM

Item ID: D206-642-151

Accept

**\*N900040100\***

Setup Start **\*NS1\***

Revision ID:

Item Name: Replacement Skidtube

Stop **\*NS2\***

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
280		0.00							
<b>*280*</b>	HandFinishing								
HandFinish		0.00							
Hand Finishing	<div>Memo</div> <div>1-Install D2646 Aft Cap and seal with Sikaflex. Clean excess adhesive A/RSikaflex-291 <u>11/11/14</u> Sikaflex expire date: <u>12/10/1</u></div> <div>2- Install wearplate as per dwg</div> <div>2-Wing Walk as per Dwg D3804 and QSI 005 4.4 Batch: <u>11/11/14</u></div>								
290									
<b>*290*</b>									
QC									
Quality Control									
	QC3- Inspect Part Finish	0.00							

8 11/12/14

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75384

**\*75384\***

Page 12

October-21-11 11:28:56 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
300	QC5- Inspect part completeness to step on W/O	0.00							
<b>*300*</b>									
QC	Memo	0.00							
Quality Control									
310	Packaging	0.00							
<b>*310*</b>									
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D206-642-151								
	Location: _____								
	PPP Rev: _____								
320	QC21- Final Inspection - Work Order Release	0.00							
<b>*320*</b>									
QC	Memo	0.00							
Quality Control									

8/11/2/14

PPP 75721

11/12/14

11/12/14

11-12-14  
(1)

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



# Picklist Print

October-21-11 11:29:00 AM

Page 1

Work Order ID: 75384

**\*75384\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A 10.12.08 PER IIN REV.N DD VERF:EC  
REV:B 11.09.16 PER IIN REV.O DD VERF:EC

IPP

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2620

Manufactured

No

110

Each

13.0000

1

1

**\*D2620\***

Skidtube, 206 Skidtube

\*\*

Location	Loc Qty	Loc Code
LG	13	
71616	3	
71617	6	
73783	1	
73785	1	
73786	2	

①

OK

11/10/23

D2647

Manufactured

No

110

Each

199.0000

1

1

**\*D2647\***

Cap

\*\*

Location	Loc Qty	Loc Code
LG002	199	
55352	4	
71171	11	
73826	184	

BE-11-11-24

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:29:00 AM

Work Order ID: 75384

**\*75384\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

CR3212-4-04

Purchased

No

180

Each

18,966.00

52

52

**\*CR3212-4-04\***

Cherry Rivet

\*\*

Wh  
11/12/28

Location

Loc Qty

Loc Code

ST311

150

116471

78

117816

3

118686

1

118840

68

st510

10000

119075

10000

ST516

8816

119017

8816

54

D2654-1

Manufactured

No

180

Each

4.0000

1

1

**\*D2654-1\***

Web

\*\*

Wh  
11/11/28

Location

Loc Qty

Loc Code

LG

4

73794

4

75476

180

Each

110.0000

2

2

D3286-1

Manufactured

No

**\*D3286-1\***

Doubler

\*\*

Wh  
11/11/28

Location

Loc Qty

Loc Code

LG002

110

74111

22

74441

88

2

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:29:00 AM

Work Order ID: 75384

**\*75384\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2649 Manufactured No

200 Each 1,184.000 19 19

**\*D2649\***

Cross Bolt Spacer

\*\*

*BE 11-11-29*  
*B 73859 x19*

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
LG	617	
68224	2	
71355	2	
72704	2	
72841	11	
73855	600	
LG001	567	
65317	1	
68507	11	
73390	8	
73857	21	
73860	526	

D3286-3 Manufactured No

200 Each 101.0000 2 2

**\*D3286-3\***

Spacer

\*\*

*BE 11-11-29*  
*B 74870 x2*

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
LG001	101	
74117	21	
74439	80	

D2680-041 Manufactured No

210 Each 99.0000 1 1

**\*D2680-041\***

Nut Plate

\*\*

*BE 11-11-29*  
*B 44/30*

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
LG	4	
73334	4	
ST020	95	
73854	95	

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

Page 4

October-21-11 11:29:00 AM

Work Order ID: 75384

**\*75384\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

CR3212-4-03

Purchased

No

210

Each

2,010.000

2

2

**\*CR3212-4-03\***

Cherry Rivet

\*\*

(2)

BB 11/11/30

Location

Loc Qty

Loc Code

FP-B

2

110139

2

ST311

1008

114859

1008

ST318

1000

149017

1000

AN960JD416

NAS1149D0463J

Purchased

No

210

Each

0.0000

1

1

**\*AN960JD416\***

Washer

\*\*

(x1) 11118384 11/12/13

CCR264SS3-3

Purchased

No

210

Each

1,285.000

2

2

**\*CCR264SS3-3\***

Cherry Rivet

\*\*

(2)

BB 11/11/30

Location

Loc Qty

Loc Code

FP-B

2

113973

2

ST311

283

117849

283

ST317

1000

119017

1000

MS27039-4-06

Purchased

No

210

Each

433.0000

1

1

**\*MS27039-4-06\***

Screw

\*\*

11/12/13

Location

Loc Qty

Loc Code

ST292

433

119075

400

119124

33

X1

October-21-11 11:29:00 AM

Shop Packet Print

Page 4

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries





W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:29:00 AM

Page 6

Work Order ID: 75384

**\*75384\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2646

Manufactured No

280

Each

91.0000

1

1

**\*D2646\***

Aft Cap

\*\*

B73825 (x1) MU 11/12/12

## Location

## Loc Qty

## Loc Code

FP002

60

73294

60

FP004

17

68280

17

FP006

5

62678

5

FP-4

5

70945

1

71070

4

fp5

4

71038

4

D3805-041

Manufactured No

280

Each

0.0000

1

1

**\*D3805-041\***

Wearplate Assembly Fwd, Low Gear

MS27039-1-08

Purchased No

280

Each

1,971.000

2

2

**\*MS27039-1-08\***

Screw

\*\*

B75486 (x1) MU 11/12/12

\*\*

MU 11/12/13

## Location

## Loc Qty

## Loc Code

ST291

1971

117423

155

118378

316

118910

500

119075

500

119109

500

x2

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:29:00 AM

Page 7

Work Order ID: 75384

**\*75384\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

MS21042L3

Purchased

No

280

Each

9,976.000

7

7

**\*MS21042L3\***

\*\*

11/12/13

Nut

Location

Loc Qty

Loc Code

ST300

976

117441

16

117885

87

118451

179

118927

694

ST516

6000

119017

6000

ST518

3000

119075

3000

x7

D3805-045

Manufactured

No

280

Each

5.0000

1

1

**\*D3805-045\***

\*\*

B75496 (x1) 11/12/13

Wearplate Assembly Aft, Low Gear

Location

Loc Qty

Loc Code

FP

5

73817

5

AN960JD10L

NAS1149D0332J

Purchased

No

280

Each

0.0000

2

2

**\*AN960JD10L\***

\*\*

M11838A (x2) 11/12/13

Washer

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

Page 8

October-21-11 11:29:00 AM

Work Order ID: 75384

**\*75384\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

AN3-37A Purchased No

280 Each 2,319.000 7 7

**\*AN3-37A\***

Bolt

\*\*

*HL 11/12/13*

Location

Loc Qty

Loc Code

ST353

269

111668

169

118628

100

ST354

50

117619

50

ST518

2000

119086

2000

*x7*

NAS1149D0363J

Purchased No

280 Each 2,836.000 7 7

**\*NAS1149D0363.J\***

Washer

\*\*

*HL 11/12/13*

Location

Loc Qty

Loc Code

ST298

2836

117601

218

118077

135

118612

483

118968

2000

*x7*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



ITEM	Qty -041	Qty -043	Part Number	Description
1	X		D3804-041	SKIDTUBE ASSEMBLY, 206 A/B LOW
2		X	D3804-043	SKIDTUBE ASSEMBLY, 206 A/B HIGH
5	1	1	D2600-1-160	EXTRUSION
6	1	1	D2646	AFT CAP
7	1	1	D2647	CAP
8	19	20	D2649	CROSS BOLT SPACER
9	6	8	D2651-1	PLUG
10	6	8	D2651-3	O-RING
11		1	D2654-3	WEB
12	1		D2654-1	WEB
13	1	1	D2680-041	NUT PLATE
14	2	2	D3286-1	DOUBLER
15	2	2	D3286-3	STUD
21	2	2	AN960JD10L	WASHER
22	1	1	AN960JD416	WASHER
23	2	2	CCR284SS3-3	RIVET
24	2	2	CR3212-4-03	RIVET
25	52	52	CR3212-4-04	RIVET
26	2	2	MS27039-1-08	SCREW
27	1	1	MS27039-4-06	SCREW

#### NOTES

- 1) MATERIAL: N/A
- 2) FINISH: -CHEMICAL CONVERSION COAT PER DART QSI 005 4.1  
-POWDER COAT WHITE (4.3.5.1) PER DART QSI 005 4.3
- 3) BLACK ANTI-SKID PAINT AS INDICATED TO 0.5 ABOVE LOCATION RIDGE PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- 5) UNITS: INCHES UNLESS OTHERWISE NOTED
- 6) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 7) IDENTIFICATION: NONE
- 8) WEIGHT: 12.5 lb
- 9) WELD PER DART QSI 004
- 10) BENDING: DAMAGE TOLERANCE ON FWD BEND:  
THERE SHOULD BE NO VISIBLE WRINKLES IN THE BEND FROM THE GROUND TO A HEIGHT OF 5 INCHES ABOVE THE GROUND. IT IS ACCEPTABLE TO POLISH OUT GOUGES UP TO 0.020 DEEP IN THE BENT PORTION OF THE TUBE. A MAXIMUM REDUCTION IN DIAMETER OF 0.150" IS ACCEPTABLE IN THE BENT PORTION OF THE TUBE.
- 11) BOND WEB INTO OUTER TUBE WITH SIKAFLEX-241/-291 ADHESIVE PER DART QSI 015
- 12) INSERT D2651-1 PLUG C/W D2651-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE)

SHOP COPY  
RETURN TO  
ENGINEERING  
UNCONTROLLED COPY  
SUBJECT TO AMENDMENT  
WITHOUT NOTICE  
WORK ORDER  
NO. 75384 M.C.J.

11/10/21

RELEASED  
UP 09.03.03  
per ECN 09-536

REV.	NEW ISSUE	DESCRIPTION	MB	08.07.07
DESIGN			BY	DATE
DRAWN				
CHECKED				
MFG. APPR.				
APPROVED				
DE APPR.				
DATE	08.07.07			

**DART AEROSPACE USA, INC**  
PORT HADLOCK, WA  
DRAWING NO. D3804  
REV. A  
SHEET 1 OF 5  
TITLE SKIDTUBE ASSEMBLY, 206A/B  
SCALE NTS

COPYRIGHT © 2008 BY DART AEROSPACE USA, INC  
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

RELEASED  
Q 09.03.03



DESIGN	99	<b>DART AEROSPACE USA, INC</b>	
DRAWN	J	PORT HADLOCK, WA	
CHECKED	J	DRAWING NO.	REV. A
MFG. APPR.	BE	D3804	SHEET 2 OF 2
APPROVED	49	TITLE	SCALE
DE APPR.	49	SKIDTUBE ASSEMBLY, 206A/B	NT
DATE	08.07.07	COPYRIGHT © 2008 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PROPERTY OF DART AEROSPACE USA, INC. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DART AEROSPACE USA, INC. IT IS NOT TO BE USED FOR ANY PURPOSES OR CONCOMITANT TO ANY OTHER PERSONNEL THAT IT IS NOT DESIGNED FOR.	

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

RELEASED  
09-03-03



DESIGN	99	<b>DART AEROSPACE USA, INC</b>	
DRAWN	99	PORT HADLOCK, WA	
CHECKED	99	DRAWING NO.	REV. A
MFG. APPR.	99	D3804	SHEET 3 OF 3
APPROVED	99	TITLE	SCALE
DE APPR.	99	SKIDTUBE ASSEMBLY, 206A/B	NT
DATE 08.07.07		COPYRIGHT © 2006 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PROPERTY OF DART AEROSPACE USA, INC. NO PART OF THIS DOCUMENT NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT THE WRITTEN PERMISSION OF DART AEROSPACE USA, INC.	

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_


Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			


**NOTE:** Date & initial all entries

75384


RELEASED  
09.03.03

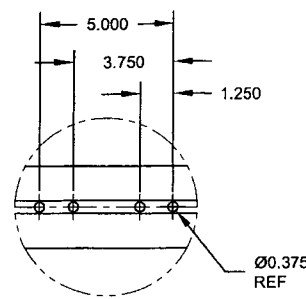

**DETAIL A**  
SCALE NONE  
D6-2  
C2-2  
D6-3  
C2-3

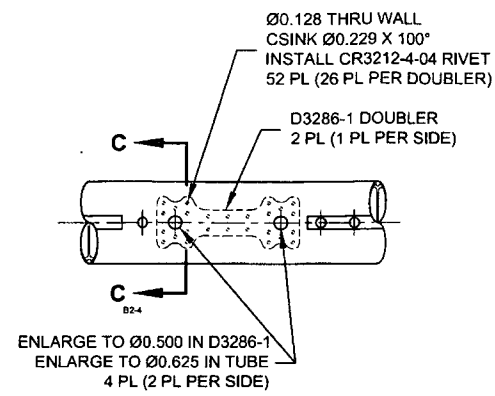


**DETAIL B**  
SCALE NONE  
C3-2  
C3-3

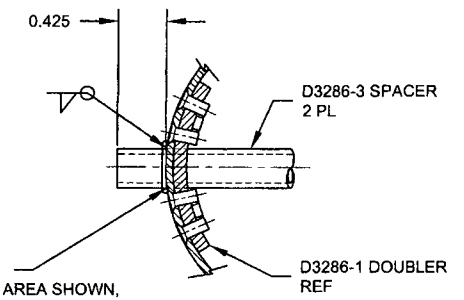

- TO INSTALL D3286-1/3:
1. GRIND OFF FLANGE IN AREA SHOWN, FLUSH WITH OUTSIDE SURFACE OF ROUND TUBE
  2. LOCATE & DRILL D3286-1 DOUBLER USING DT3286-1T1
  3. ENLARGE HOLES IN D3286-1 TO Ø0.500
  4. ENLARGE HOLES IN TUBE TO Ø0.625 AND CHAMFER HOLE 0.03 X 45°
  5. RIVET D3286-1 TO TUBE
  6. INSERT D3286-3 SPACER
  7. WELD IN PLACE AND GRIND FLUSH

**SECTION C-C**  
PARTIAL SECTION  
SCALE NONE  
C6-4

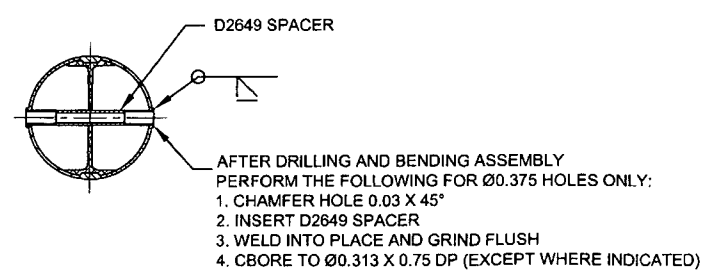

**SECTION D-D**  
FOR Ø0.375 HOLES ONLY  
SCALE NONE  
A4-2  
A4-3

DESIGN	97	<b>DART AEROSPACE USA, INC</b>	
DRAWN	97	PORT HADLOCK, WA	
CHECKED	97	DRAWING NO.	REV. A
MFG. APPR.	97	D3804	SHEET 4 OF 5
APPROVED	97	TITLE	SCALE
DE APPR.	97	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	COPYRIGHT © 2008 BY DART AEROSPACE USA, INC	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.			

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



75384

RELEASED  
09.03.03

CCR264SS3-3  
RIVET  
2 PL

CR3212-4-03 RIVET  
2 PL

**VIEW G-G**  
SCALE NONE A7-5

D2647 CAP, TO INSTALL:  
1. CUT TUBE LEVEL  
2. REMOVE RIDGE ON FWD SIDE  
3. LOCATE D2647 (TRIM AS REQD)  
4. WELD D2647 IN PLACE  
5. GRIND FLUSH  
6. RIVET D2680-041 NUT PLATE  
IN PLACE

MS27039-4-06 SCREW  
AN960JD416 WASHER  
D2680-041  
NUTPLATE

1.0 REMOVE RIDGE ON  
INSIDE OF SKIDTUBE  
LEAVE 0.070 MIN.

CT-3 G

1/16

**DETAIL E**  
SCALE NONE B7-2  
B7-3

0.400

END OF WEB

BORE OUT END  
OF SKIDTUBE  
TO 0.75 DEPTH  
AND 0.070 WALL

SEAL WITH  
SIKAFLEX-241/291

D2646 AFT CAP

Ø0.204  
REF

MS27039-1-08 SCREW  
AN960JD10L WASHER  
2 PL

**DETAIL F**  
SCALE NONE B2-2  
B2-3

DESIGN	97	<b>DART AEROSPACE USA, INC</b>	
DRAWN	97	PORT HADLOCK, WA	
CHECKED	97	DRAWING NO.	REV. A
MFG. APPR.	97	D3804	SHEET 5 OF 5
APPROVED	97	TITLE	SCALE
DE APPR.	97	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	<small>COPYRIGHT © 2008 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSES OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR#: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries